



**Micro Switch Cam Rest Position**  
See Vertical or Horizontal Arm Installation Instructions for Micro Switch activation sequence.


**Micro Switch Cam Adjustment Screw**

**SW 1 Micro Switch**  
Is the ALARM SWITCH  
Factory Preset to switch on when the roller arm moves 5°

**SW 1 & SW 2 Cam Rotation**

**SW 2 Micro Switch**  
Is the TRIP SWITCH  
Factory Preset to switch on when the roller arm moves 10°

The ALARM & TRIP SWITCHES may be adjusted by loosening the Micro Switch Cam Screws and moving the Cams backwards or forwards to the desired Limit Switch Set Point, and then retighten the Micro Switch Cam Screws for operational use.

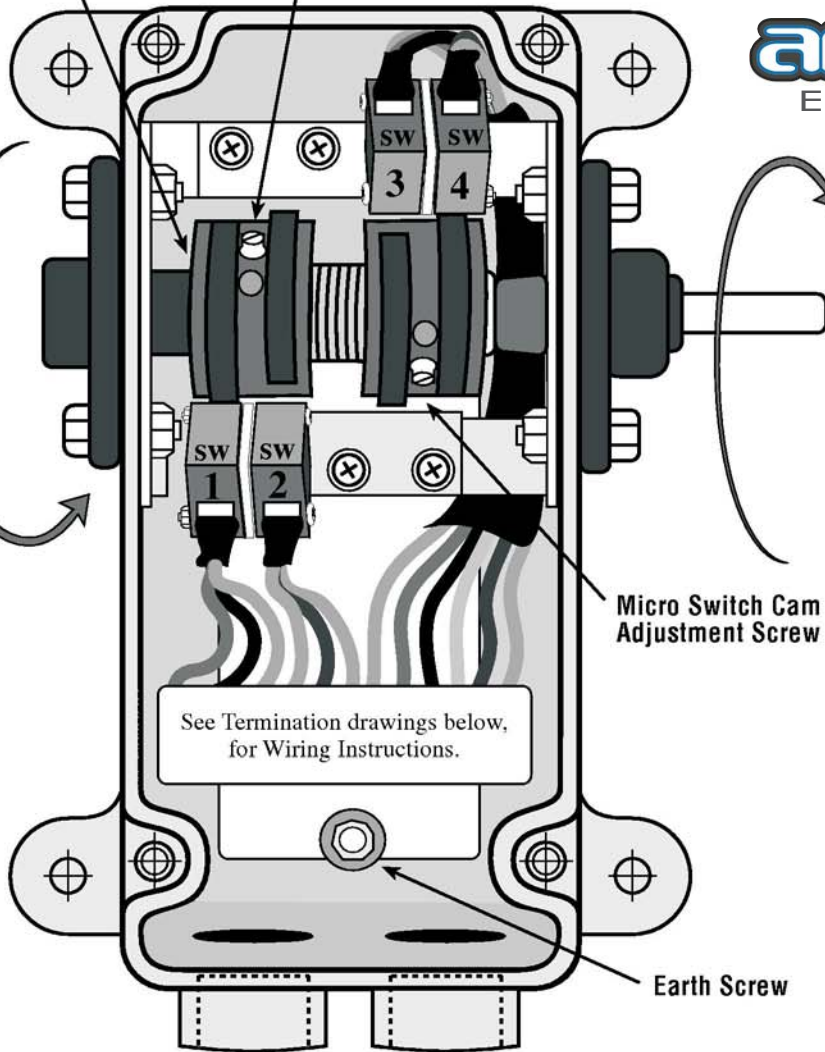

**SW 3 & SW 4 Cam Rotation**

**SW 3 Micro Switch**  
Is the ALARM SWITCH  
Factory Preset to switch on when the roller arm moves 5°

**SW 4 Micro Switch**  
Is the TRIP SWITCH  
Factory Preset to switch on when the roller arm moves 10°

See Termination drawings below, for Wiring Instructions.

**Micro Switch Cam Adjustment Screw**

**Earth Screw**

**NOTE:**  
Switches 3 & 4 and Switch 3 & 4 Cam only fitted in Part No's.  
STD-P/HB-D or STD-P/HB-D-K

